

Getting To Know Your Honda Maintenance Minder



HONDA

Will always be A or B. Never both at the same time.

A: Replace engine oil & filter.

B: Replace engine oil, filter and service brakes.

1: Balance & rotate tires.

2: Replace cabin & engine air filters.

3: Replace transmission fluid and transfer case fluid if applicable.

4: Replace spark plugs and timing belt, water pump and perform valve adjustment if applicable.

5: Replace engine coolant.

6: Replace rear differential fluid.

7: Replace brake fluid.

A or B can be followed by any individual number or number combination. (Example: A126 , A257, B1, B67 etc.)

Scoville-Meno